

Curlimals User Instructions

CONTENTS:

- 1 x Curlimal
- 3 AAA 1.5v batteries (included)

Please remove all packaging before giving this toy to a child, must be retained for future reference as it contains important information.

To start, move the switch on the battery box from TRY ME to ON. Now your Curlimal will respond to your touch.

Om de aanraaksensoren in het speeltje te activeren, AAI JE DE BOVENKANT VAN HET HOOFD, KIETEL DE BUIK OF STRIJK OVER DE NEUSBRUG. Het speelgoed reageert met een verscheidenheid aan geluiden en bewegingen, waaronder praten, niezen, giechelen, gapen, opkrullen en snurken, en meer!

Schakel altijd naar 'OFF' wanneer niet in gebruik, om de batterij te sparen.

De batterijen in dit speelgoed zijn alleen bedoeld voor demonstratiedoeleinden in de winkel.

Schakel van 'TRY ME'-modus naar 'ON' voor alle functies.

TO REPLACE BATTERIES

- Removal and replacement of batteries should be carried out by an adult or under adult supervision.
- Unscrew the single screw on the battery cover.
- Ensure the batteries are inserted correctly, observing the + and – marks on the battery compartment.

Replace batteries using three “AAA” size 1.5v Alkaline batteries.

- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Replace battery cover and screw down.
- Do not attempt to charge non-rechargeable batteries. Do not short circuit the contacts in the battery compartment. Exhausted batteries should be removed from the product.
- Only batteries of the same or equivalent type as those recommended are to be used. Dispose of old batteries properly, never dispose of batteries in a fire. Remove batteries after use if storing for long periods
- Do not mix old (used) and new batteries or batteries of different types.
- If the product is dropped the batteries can become dislodged. Remove the battery cover and re-insert batteries.
- If after following the instructions and checking the batteries this product does not function properly, please contact Golden Bear Products Ltd email customerservices@goldenbear toys.co.uk
- Do not bring into contact with water.
- 3 AAA 1.5v batteries (included).
- Sponge clean only.
- Dispose of this product responsibly. Product and batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries.

HOW TO PLAY:

BATTERY INFORMATION:

CARE INSTRUCTIONS:

HELP THE ENVIRONMENT:

For questions and comments please email customerservices@goldenbear toys.co.uk